





M212 Breeze High Chair Assembly Instructions

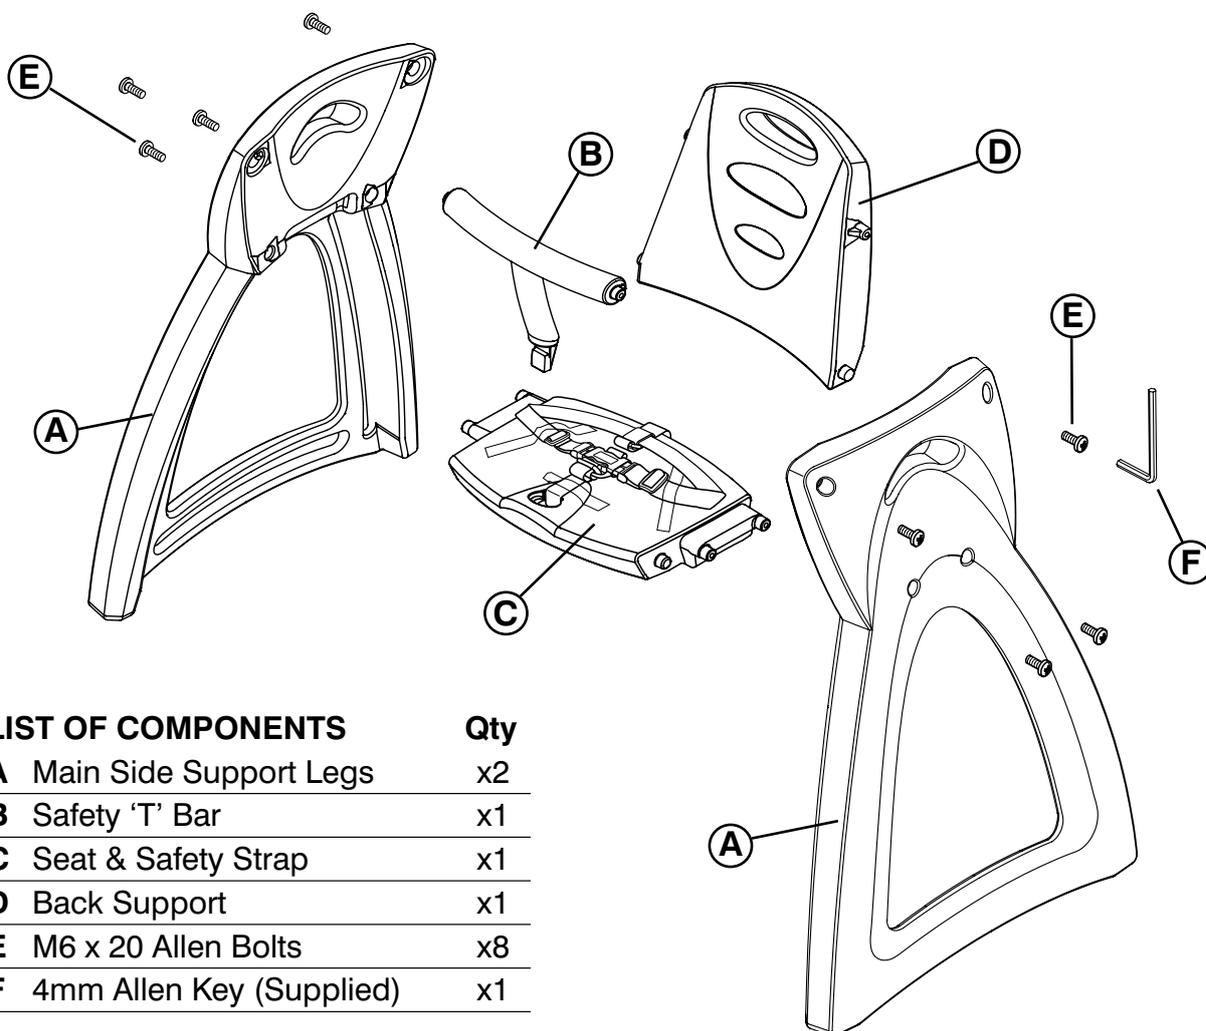


LIST OF COMPONENTS	Qty
A Main Side Support Legs	x2
B Safety 'T' Bar	x1
C Seat & Safety Strap	x1
D Back Support	x1
E M6 x 20 Allen Bolts	x8
F 4mm Allen Key (Supplied)	x1

1

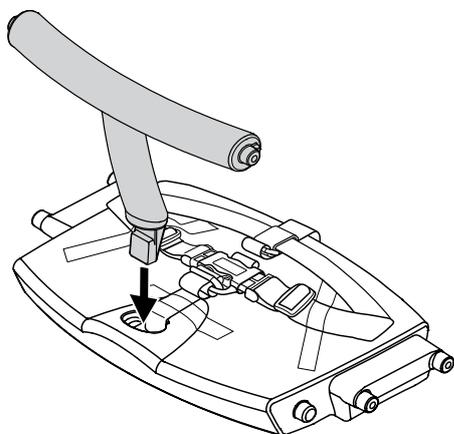

Insert 'T' Bar into Seat
Note: Leave Safety Strap Taped to Seat


2

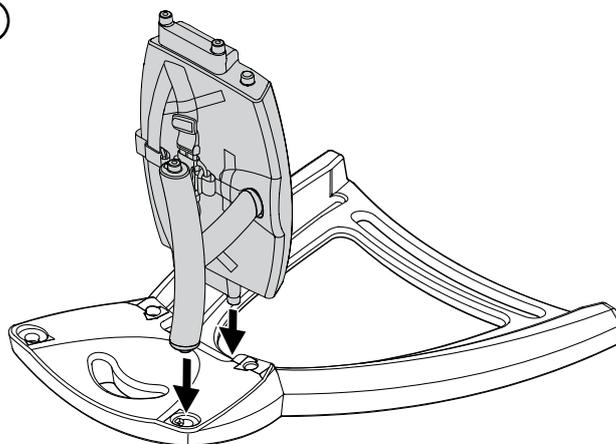

Lay x1 Side Support Leg on a flat surface
Insert 'T' Bar & Seat into Side Support Leg
Push firmly to ensure a good fit




3

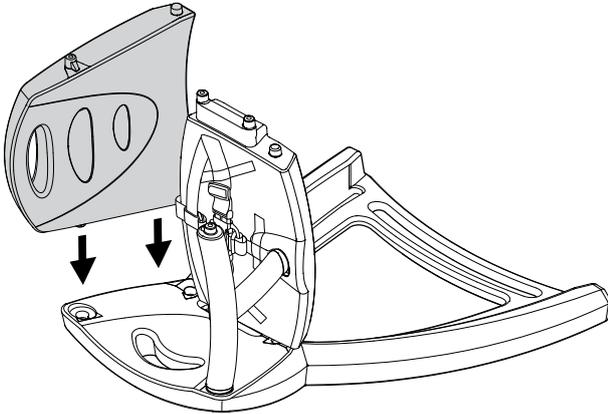


Insert Back Support. Push firmly to ensure a good fit
 Note: Ensure Safety Strap is still taped to Seat Pad

4

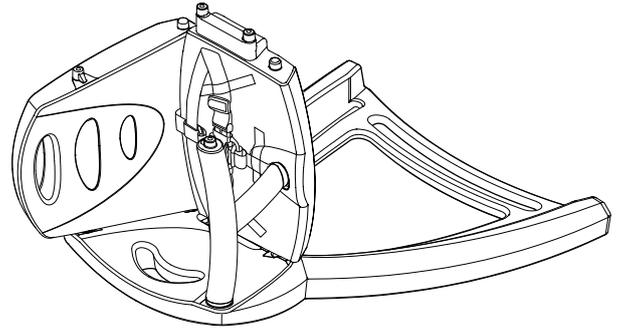


Make sure all components are located properly and pushed firmly together

5

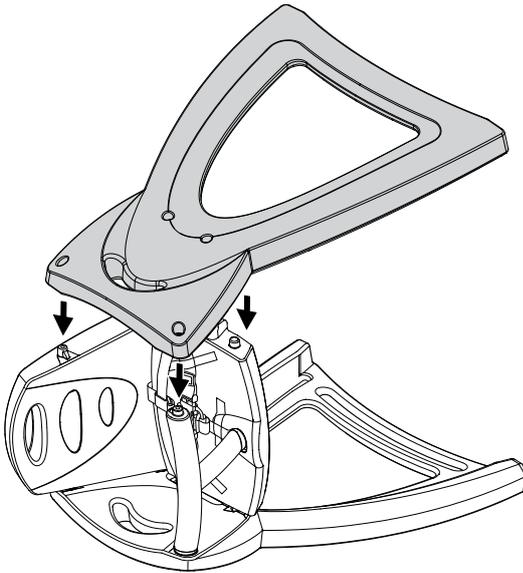


Locate other x1 Side Support Leg onto rest of already assembled components

6

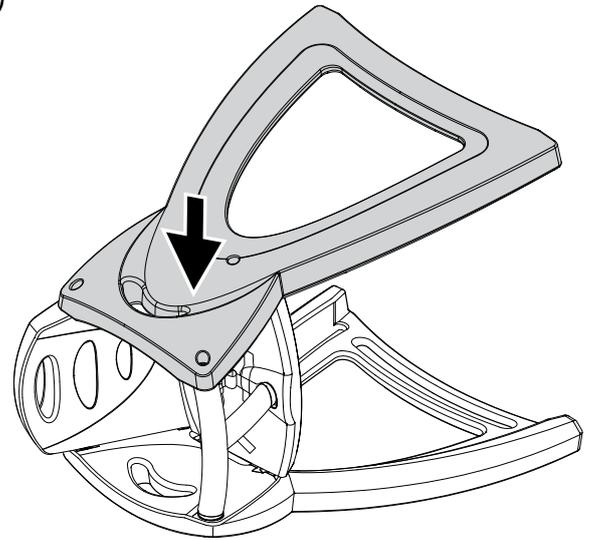


Push Side Support Leg firmly down to ensure a good fit

7

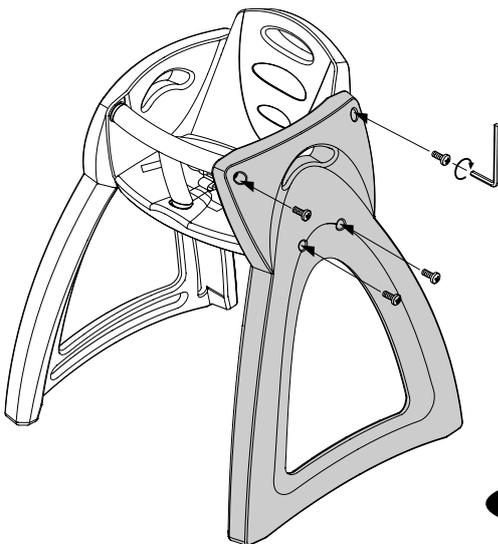

Stand chair upright and insert x4 Allen Bolts
 Tighten securely using Allen Key provided

8

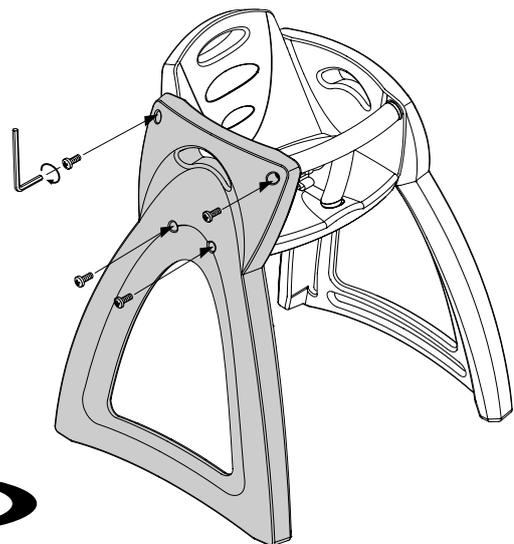

Rotate chair and insert other x4 Allen Bolts and tighten securely using Allen Key. Remove Tape from Strap - Your chair is ready to use.

